


## ROCK AND ROPE

SOLDER		PARTS
-5V	1	+12V
SOUND	2	SOUND
2P SHOOT 1	3	2P SHOOT 2
2P LEFT	4	2P RIGHT
1P START	5	2P START
1P SHOOT 2	6	2P UP
1P SHOOT 1	7	SERVICE
1P RIGHT	8	1P LEFT
1P UP	9	2P DOWN
COIN 1	10	COIN 2
1P DOWN	11	COIN COUNTER 1
	12	COIN COUNTER 2
TV GREEN	13	TV BLUE
TV RED	14	TV SYNC
	15	
GND	16	GND
GND	17	GND
+5V	18	+5V

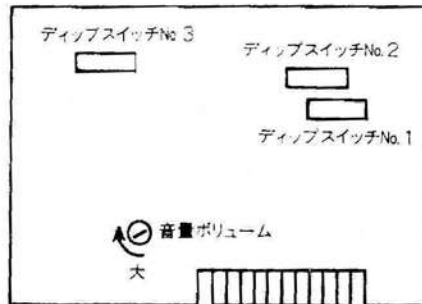

### DIP SW No.1

COIN	PLAY	1	2	3	4
1	1	OFF	OFF	OFF	OFF
1	2	ON	OFF		
1	3	OFF	ON		
1	4	ON	ON		
1	5	OFF	OFF	ON	OFF
1	6	ON	OFF		
1	7	OFF	ON		
2	1	ON	ON		
2	3	OFF	OFF	OFF	ON
2	5	ON	OFF		
3	1	OFF	ON		
3	2	ON	ON		
3	4	OFF	OFF	ON	ON
4	1	ON	OFF		
4	3	OFF	ON		
FREEPLAY		ON	ON		

COIN SW 2 は5・6・7・8番を使用

### DIP SW No.2

		1	2	3	4~7	8
機数	3	OFF	OFF			
	4	ON	OFF			
	5	OFF	ON			
	フリー	ON	ON			
TYPE	TABLE			OFF		
	UP LIGHT			ON		
デモ音	あり					ON
	なし					OFF

### DIP SW No.3

① 最初のボーナスプレイヤーが与えられる得点

	1	2	3
20,000	ON	OFF	OFF
30,000	OFF	ON	OFF
40,000	ON	ON	OFF
50,000	OFF	OFF	ON
60,000	ON	OFF	ON
70,000	OFF	ON	ON
80,000	ON	ON	ON

② 連続してボーナスプレイヤーが与えられる得点

	4	5	6
40,000	ON	ON	OFF
50,000	OFF	OFF	ON
60,000	ON	OFF	ON
70,000	OFF	ON	ON
80,000	ON	ON	ON

③ 上記①の設定だけが、②の設定も使うかどうかの選択

	7	
SELECTION	1 ONLY	OFF
	1 + 2	ON