

Donkey Kong Remix DIP switch settings

	A	B	C	D	E	F	G	H
Number of Jumpman								
3	OFF	OFF						
5	ON	OFF						
7	OFF	ON						
9	ON	ON						
Score Level for Extra Jumpman								
10,000 points			OFF	OFF				
15,000 and every additional 150,000 points			ON	OFF				
25,000 and every additional 250,000 points			OFF	ON				
35,000 and every additional 350,000 points			ON	ON				
Coinage								
1 coin / 1 play					OFF	OFF		
2 coins / 1 play					ON	OFF		
1 coin / 2 plays					OFF	ON		
Free play					ON	ON		
Game Difficulty								
Normal							OFF	
Hard							ON	
Cabinet Type								
Cocktail								OFF
Upright								ON

Donkey Kong DIP switch settings

	A	B	C	D	E	F	G	H
Number of Jumpman								
3	OFF	OFF						
4	ON	OFF						
5	OFF	ON						
6	ON	ON						
Score Level for Extra Jumpman								
7,000 points			OFF	OFF				
10,000 points			ON	OFF				
15,000 points			OFF	ON				
20,000 points			ON	ON				
Coinage								
1 coin / 1 play					OFF	OFF	OFF	
1 coin / 2 plays					OFF	ON	OFF	
1 coin / 3 plays					OFF	OFF	ON	
1 coin / 4 plays					OFF	ON	ON	
2 coins / 1 play					ON	OFF	OFF	
3 coins / 1 play					ON	ON	OFF	
4 coins / 1 play					ON	OFF	ON	
5 coins / 1 play					ON	ON	ON	
Cabinet Type								
Cocktail								OFF
Upright								ON

Game settings may also be set from the Service Menu . Hold the Service Switch down for one second while powering the game up to enter the service menu. Holding P1+P2 Start buttons for one second during power up may also (optionally) be used to enter the service menu.

Holding ServiceSwitch +P1+P2 simultaneously for one second during power up will trigger a factory reset/clearing of all saved settings and scores in the DK Remix board.